			TECH
			SWITZERLAND
Document:	Datasheet	Author /Date:	DHE / 28.12.2016
Version:	V1.0	Approved /Date:	FHA / 28.12.2016
Category:	Hand Pump		

Adapter Kit to Hand pump HPA-300118-B

Dear Customer

The old hand pump HPA-300118 is no longer available and has been replaced by the new model HPA-300118-B, with SAE porting.

To serve you with the right adapter kit, we kindly ask you to fill out the following form and to send it back to us, together with your HPA order.

Thank you very much for your understanding and cooperation.

ltem	Part no.	New System		Retrofit / Spare part	
		stand- alone	on CPS	stand- alone	on CPS
HPA-300118-B	10319	1	1	1	1
Adapter SAE 4 to 1/4" NPTF				1	1
Adapter SAE 6 to 3/8" NPTF				2	1
O-Ring SAE 6			1		1
Inlet tube SAE 6			1		1
Please choose application:					
Adapter Kit				KT- 300118-3	KT- 300118-4


Please type existing CPS model if hand pump is on reservoir:	CPS-	

Please type serial number of existing CPS system:

S/N

www.huegli-tech.com

HUEGLI

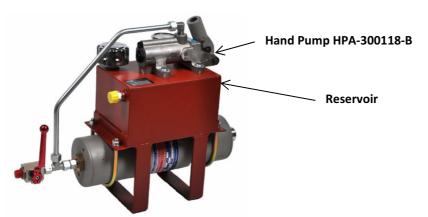

CPS: Compact Starting System with all components mounted on the reservoir.

© Copyright Huegli-Tech Ltd., Switzerland	Page 1 of 2
	HUEGLI TECH AG (LTD)
	Murgenthalstrasse 30
	4900 Langenthal Switzerland
	Phone: +41 62 916 50 30
	Fax: +41 62 916 50 35



Adapter kit mounting on HPA-300118-B





Fig. 1+2: Adapter SAE 6 to 3/8" NPTF for In-/Outlet ports (for stand-alone HPA).



Fig. 3: Adapter SAE 4 to 1/4" NPTF for Gauge. port.



Fig. 4: Inlet tube SAE 6 with O-Ring for Inlet (for HPA mounted on CPS reservoir).



CAUTION:

Prior to any disassembly work, all pressurized fluid in the accumulators must be bled to the reservoir. Always release all hydraulic pressure before disconnecting any lines.

© Copyright Huegli-Tech Ltd., Switzerland

Page 2 of 2 HUEGLI TECH AG (LTD) Murgenthalstrasse 30 4900 Langenthal Switzerland Phone: +41 62 916 50 30 Fax: +41 62 916 50 35 www.huegli-tech.com